
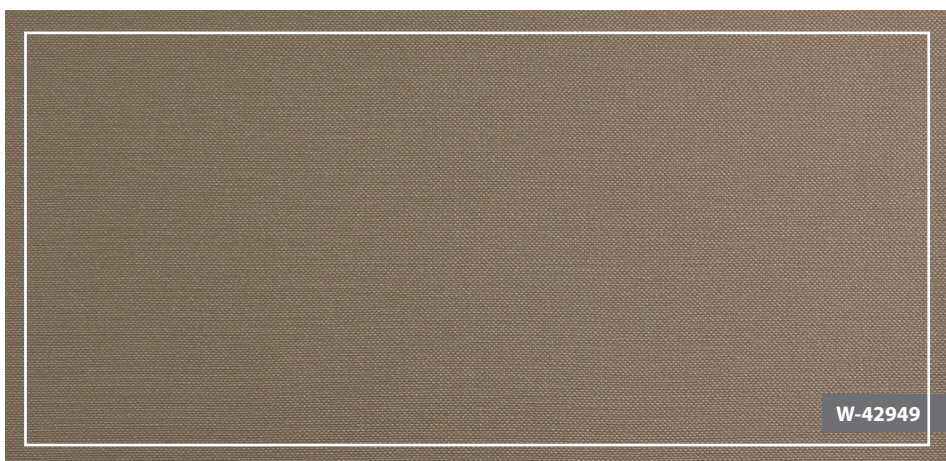





WHISPER

Kleurenkaart

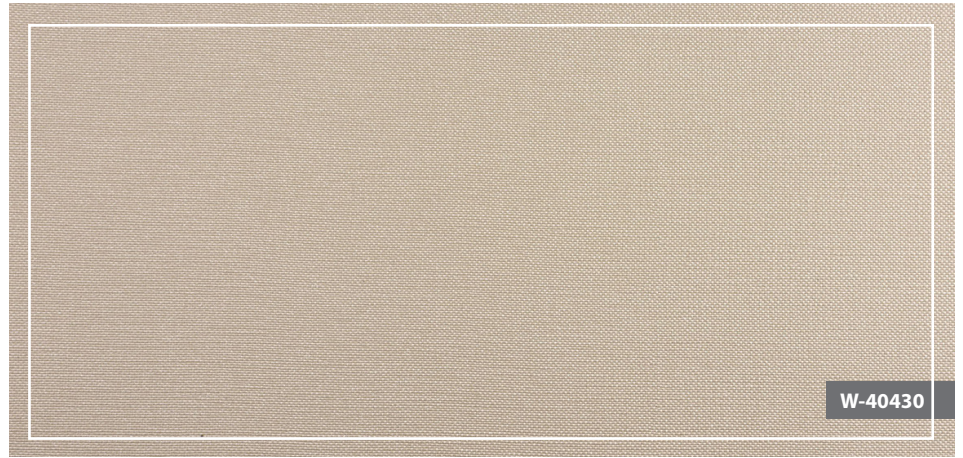


WHISPER

Kleurenkaart

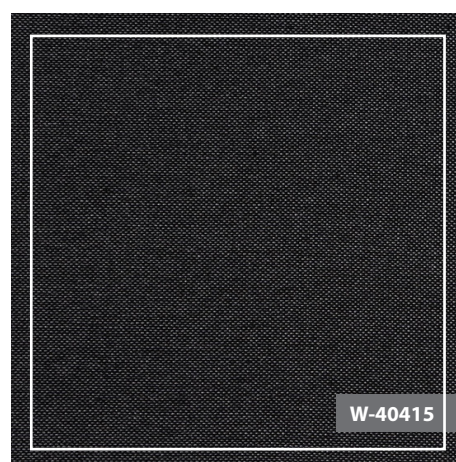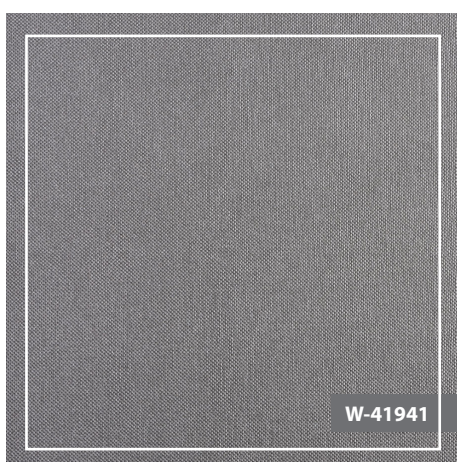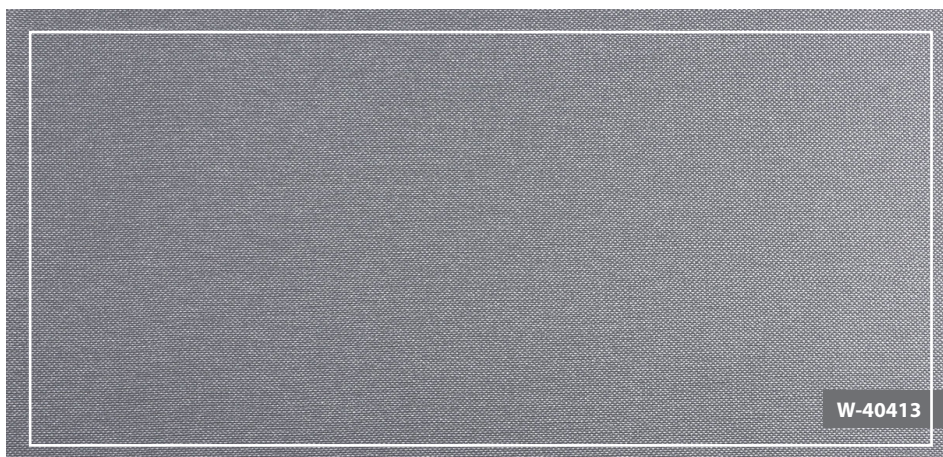


WHISPER

Kleurenkaart

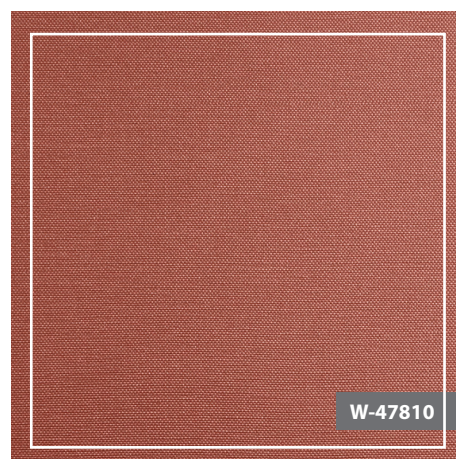

WHISPER

Kleurenkaart

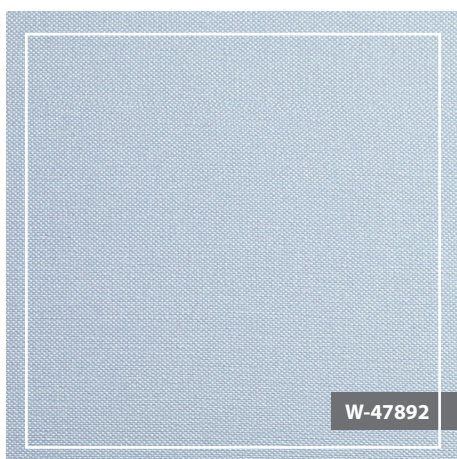

WHISPER

Kleurenkaart

Technical properties	results	standards
Composition	81%PVC/3% Acrylic PU/16%Polyester	EN 12127
width	140+-3 cm	
weight	650 g/m ²	
roll length	35 m	
Physical properties		
waterproof	yes	EN20811
colour fastness to light outdoor	7+	ISO 105 B04
weathering UV test	4	ISO 4892-2
colour fastness to chlorine, salt water	4-5	ISO 105 E03
tensile strength (warp/weft) N(%)	512(55,7), 620(78)	ISO 13934-1
tensile elongation (warp,weft)	41,43	ISO 1421
tearing strength (warp/weft)	26,28	ISO 4674
abrasion resistance (Martindale)	300000 cycles	ISO 12947-2
flexing endurance	no damage at 100000 cycles	ISO 32100
microbial and fungal resistance	degree 0, excellent	ISO 846/AATCC 147
extreme exposure temperatures	-23°C/+80°C	
Coating adhesion (warp,weft)	42,39	ISO 2411
anti-static	against dust	
FR standards		
France	M2	NFP 503,504,505 optional
Germany	B1	DIN 4102 optional
Italy	Classe Uno	UNI 9175 and UNI 9177
Europe	pass	EN 1021-1,2
United Kingdom	Crib 5	BS 5852 optional
United Kingdom	pass	BS 5852 source 0, 1 cig and match
USA	pass	NFPA 260A/UFAC Class 1
USA	pass	CAL 117
Marine	pass	IMO FTPC P8
Aeronautical	pass	NY/NJ Port authority FAR Part 25.853
Management systems		
Environment and health		Oekotex 100 class IV
		REACH certified
		Phthalate free
		Bromine free no halogenated FR chemicals
		Non-Toxic
		No Bisphenol A (BPA)
Care and cleaning instructions		
	clean regularly with a damp cloth, use water with a mild soap, no aggressive nor abrasive detergents, no wax	

This information is not a guarantee and does not relieve the user from the responsibility of the proper and safe use of the product and all cleaning agents. Please check compatibility when using this product in combination with painted or varnished surfaces.

WHISPER Kleurenkaart



Disinfectant Use against All Viruses

The information published in this care guide refers to the performance of Whisper, Texture, Ibiza, Bugatti products in specific tests conducted under laboratory conditions. Results may vary under actual conditions.

Coated fabrics have long been the choice for healthcare upholstery. In light of the current challenges faced by our healthcare providers, we thought it would be a good idea to share some cleaning and disinfecting tips for vinyl coated upholstery covering material. Click the link for more information.

COVID 19



Click the link for more information



Disinfectant resistance according to our internal, practical test methods:

Test 1 :

The disinfectants are diluted with tap water or used pure, according to the instructions of the manufacturer. The test samples are sprinkled three times a day over a period of one month. Product residues are not removed by wiping during the test period to simulate a worst-case view. At the end of the test period, an optical and haptic evaluation of the test materials is performed.

Test 2:

The disinfectants are diluted with tap water or used pure, according to the instructions of the manufacturer. The test samples are completely immersed at room temperature for 14 days. At the end of the test period, an optical and haptic evaluation of the test materials is performed.

Remarks:

The recommended dilution and reaction time of the products (manufacturer's data) should be observed. In practice, it is advisable to apply the disinfecting solutions to the whole surface to ensure a global exposure time. - The composition of the disinfectant corresponds to the situation in May 2017. ARTI takes no responsibility for any changes in the formulation of disinfectants by the manufacturers.

Care and Cleaning Guide



Cleaning and Disinfection:

To help keep your quality fabrics looking their best, follow these guidelines to extend the life of the fabric:

Remove most stains with one of the following steps:

Step 1: Eye shadow, mascara, grease, black felt tip pen, crayon, chocolate, suntan lotion and hair/body oils* Remove excess spill with a damp cloth. Clean with a 1:1 mix of alkaline soap and water. Then, rinse with water.

Step 2: Blood, urine, feces, oil base paint, lipstick. Use a 1:10 mix of bleach and water. Rinse with clean water and dry.

Step 3: All other tough stains Use a 1:10 mix of isopropyl alcohol and water. Rinse thoroughly with clean water and pat dry. (Do not use direct isopropyl alcohol on Whisper)

After cleaning, rinse area with clean water, then dry with clean cloth. Failure to remove chemical residue will cause discoloration of the coated fabric surface to manifest earlier in the life cycle of the product.

Whisper-Texture-Bugatti-Ibiza				
product	dilution	suitable	limited suitability *	not suitable
Aldasan 2000	1%	X		
Antiseptica Kombi Liquid	pure			X
Antifect plus	0,50%	X		
Apesin AP 100	0,50%	X		
ASECAdes	pure	X		
Biguanid Flächen	0,75%	X		
Brial maxx	0,50%	X		
Cleanisept Wipes	-	X		
Cosimed	0,75%	X		
Descogen Liquid	3%	X		
desderman pure	pure			X
DESOMED RAPID AF	pure		X	
Dessan 2	0,25%	X		
Franko-Cid N	0,25%	X		
Helipur H plus N	1%	X		
Hexaquart Plus lemon fresh	2%		X	
Incidin liquid	pure			X
Incidin perfekt	3%	X		
Incidin Pro	1,50%	X		
Kohrsolin extra	4%	X		
Kohrsolin FF	0,50%	X		
Lysoformin spezial	0,75%	X		
MAXX into Alk 2	0,50%	X		
Meliseptol	pure			X
Meliseptol Foam pure	pure			X
Meliseptol rapid	pure			X
microzid AF liquid	pure			X
Novadest fresh / Novadur	pure		X	
OPTISEPT	4%			X
perform classic	pure			X
terralin protect	0,50%	X		
Urinersatz	diluted	X		

* limited suitability: please test on a hidden section of the material before use in a large area. Do not let react for a long time and do not use for a longer period.